

THE ALL NEW
NEXT
GENERATION
VACUUM CLEANER



AMSTRAD
INSPIRED BY PASSION

**CORDLESS VACUUM CLEANER
MODEL NO. AMVC202**

USER'S MANUAL


www.amstradworld.com

ATTENTION:

- Please read the owner's manual before carefully before operating your vacuum cleaner. Retain it for future reference.
- Before using, please check the voltage of the product, if it is same with the one in your home.

Overview of the components

1. Handle
2. On/Off and Speed Control Button
3. Handle Release Button
4. Handy Vacuum Housing
5. Handy Vacuum Release Button
6. Handy Vacuum Handle
7. Handy Vacuum On/Off Power Switch
8. Dust Cup Release Button
9. Charging Indicator Light
10. Dust Cup(container)
11. Floor Brush Working Indicator Light
12. Floor Brush
13. Charging Stand
14. Charging Hole
15. Upholstery Brush
16. Crevice Tool

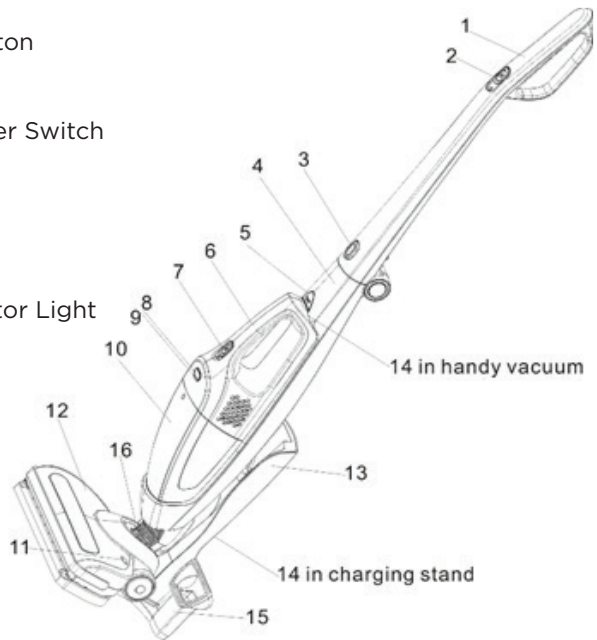

Operation Instructions

Assembling the unit

Note: Ensure that the unit is not connected to the charger before assembling the handle.

1. Take out the unit and brush.
2. Straighten the handle.
3. Press the round button on brush and push the brush firmly into position

Charging Your Vacuum Cleaner

NOTE: The handy vacuum and floor brush will not operate when charging on the charging stand.

1. Place the unit/handy vacuum near an electrical power outlet and plug in the charger.
2. Connect the charger to the charging hole. The charging indicator light will shine red to indicate that the vacuumcleaner is property connected to the charger and that the unit is being charged.

Assembly of Dust Cup

Note: Ensure that the unit is not connected to the charger before cleaning the dust cup(container).

1. Take out of the handy vacuum from vacuum housing, push the dust cup release button and remove the dust cup container.
2. Verify that the dust cup filter is inside, then re-attach the dust cup (container) to the handy vacuum.

Detaching the handy vacuum from the vacuum housing

Note: Ensure that the unit is not connected to the charger before cleaning the dust cup.

1. To remove handy vacuum from the vacuum housing, depress the handy vacuum release button.
2. Grasp the handle of handy vacuum and pull out.
3. To replace the handy vacuum into the vacuum housing, place the bottom of the handy vacuum into the vacuum housing first, then tilt towards the handy vacuum until you hear handy vacuum click into place.

Using the Vacuum

NOTE: The floor brush will not function without the handy vacuum in place and fully charged.

The vacuum is great for cleaning stairs making an awkward chore a breeze.

1. Ensure that the handy vacuum is in position on vacuum housing
2. Depress the power on/off switch on handle.

Using the Crevice Tool

The crevice tool can be used directly on the handy vacuum.

Changing & Cleaning the Dust Cup Filter

To achieve the best performance, empty the dust cup container and clean the dust cup filter after each use.

1. Remove the handy vacuum from the vacuum housing.
2. To remove the dust cup container, press down on the dust cup release button and pull off the dust cup(container).
3. Pull out the dust cup filter.
4. Empty the dust from the dust cup(container).
5. Rinse the dust cup filter in cold water, and then wait until it dries completely before replacing it back into the dust cup container. **Do Not** use a washing machine to clean the dust cup filter. Do not use a hair dryer to dry it. **Air Dry only.**
6. Replace the dust cup filter carefully into the dust cup(container). **NEVER** operate vacuum cleaner without dust cup filter in place.
7. Attach the dust cup container to the handy vacuum.

CAUTION: The suction hole must be open and free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

NOTE: It is recommended that the dust cup filter be replaced every three (3) to six (6) months depending on usage to ensure peak performance of the unit

TROUBLE SHOOTING GUIDE

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Handy vacuum does not operate	<ol style="list-style-type: none"> 1. Batteries discharged. 2. Dead battery(battery won't hold charge). 3. Contacts between the unit and the charging stand are dirty. 4. No power in electrical outlet supplying transformer. 5. Charger is plugged in 	<ol style="list-style-type: none"> 1. Charge unit. 2. Dispose of unit. 3. Wipe and clean dirt from contacts. 4. Check fuse or breaker, replace fuse/reset breaker. 5. Unplug charger
Motorized brush does not work	<ol style="list-style-type: none"> 1. The agitator is blocked with debris or string. 2. The belt is broken. 3. Handy vacuum is not seated correctly. 	<ol style="list-style-type: none"> 1. Remove debris from agitator. If there is string or thread wrapped cut gently with scissors. 2. Call customer service 3. Seat the handy vacuum correctly
Handy vacuum does not pick-up or suction power is weak	<ol style="list-style-type: none"> 1. Dust cup(container) is full. 2. Dustcup filter needs cleaning or replacement. 3. Unit needs recharging. 	<ol style="list-style-type: none"> 1. Empty dust cup (container) 2. Remove dust cup filter and check for object(s) in air duct and remove. Clean or replace dust cup filter. 3. Charge unit.
Dust escaping from-handly vacuum	<ol style="list-style-type: none"> 1. Dust cup (container) is full. 2. Dust cup filter is not installed correctly. 3. Puncture/hole in dust cup filter 	<ol style="list-style-type: none"> 1. Empty dust cup(container). 2. Review dust cup filter installation instructions. 3. Replace dust cup filter.
Battery does not hold change	Battery has reached the end of its service life.	Call customer service

Please Note

The dust cup filter is washable. It should, however, be replaced every three(3) to six(6) months depending on usage, to ensure peak performance of your vacuum.

Important

Make sure that dust cup filter has completely air dried before reinstalling back in the handy vacuum.

Warning

Please remove the handy vacuum from the unit before cleaning the power brush.

WARRANTY

Dear Customer,

Congratulations! We wish you a long and happy association with Amstrad. We would like you to know your privileges with respect to your Vacuum Cleaner

You are entitled to:

1. Repair or replacement of any parts other than plastic parts free of charge, for a period of 12 months from date of Invoice / Bill.
2. The defective part(s) shall be replaced with functionally working equivalent part(s). The removed part(s) will be OVOT PVT LTD's property.
3. These privileges are available to the original purchaser only.
4. In an event when the Vacuum Cleaner requires attention at the company's service center / authorized dealer, the purchaser should arrange to deliver the Vacuum Cleaner to the authorized service center at this cost under supervision of company's service engineer.
5. The privileges mentioned above, are for repair and replacement of defective parts only, and does not cover any consequential damages or loss or replacement of the Vacuum Cleaner itself or a refund.
6. If required, replacement of machine will be at the sole discretion of the company. Company reserves the right to replace with an equivalent model, if the same model is not available.

WARRANTY CARD

TERMS OF WARRANTY*	
Repair or replacement of any part other than the plastic parts free of charge for a period of 12 months from the date of invoice / bill	
Machine SL No.:	Dealer's Stamp & Signature
Model:	
Dealer's Name:	
.....	
Address:	
.....	
Date of Purchase:	

7. **Conditions Apply as described in the manual.**
8. **Design and Specifications are subject to change for product improvement.**

WARRANTY TERMS AND CONDITIONS

The warranty stands void in case of the following conditions:

- a. The Vacuum Cleaner has been damaged due to misuse, negligence, accident, improper installation and improper electrical circuit outside the machine, any defective electric supply, pests or any external agency. Company's decision will be final in this regard.
- b. The Vacuum Cleaner is damaged in transit whether carried by the company's transport or by the purchaser himself.
- c. The Vacuum Cleaner is tampered with, serviced or repaired by any agency not specifically authorized by the company.
- d. The Vacuum Cleaner is not used in accordance with the instructions given in the User Manual given along with this machine.
- e. The company shall not be liable for any dealer expenses, if any, in carrying out the terms of this warranty.
- f. The company shall not be liable for any delay in rectifying the Vacuum Cleaner, in the event of non-availability of parts or situations beyond the control of the company. The company will not be responsible for any losses direct or indirect in this regard.
- g. This warranty is not applicable if the Vacuum Cleaner is put to any commercial use or used at places like hospitals, institutions, community halls, hostels and other similar applications.
- h. The employees, dealers and service personnel of OVOT PVT LTD have no authority to change the terms of this warranty.
- i. This warranty issued is subject to the jurisdiction of the Civil Court of Pune.
- j. The company, OVOT PVT LTD assures warranty 12 months from the date of invoice / bill.



OVOT Private Limited

Office no 302, 3rd Floor, Business Avenue, 6th Lane, Koregaon Park, Pune 411001

Web.: www.amstradworld.com | Email : custcare@ovot.in, info@ovot.in,
feedback@ovot.in, ewaste@ovot.in | Customer Care no - 1800 26 77777

IVR No.: 020 7197 0079 | WhatsApp Service Support: +91 9175950079