

THE ALL NEW

NEXT
GENERATION
VACUUM CLEANER



AMSTRAD

 
INSPIRED BY PASSION

CORDLESS VACUUM CLEANER
MODEL NO. AMVC203

USER'S MANUAL


www.amstradworld.com

※ Components

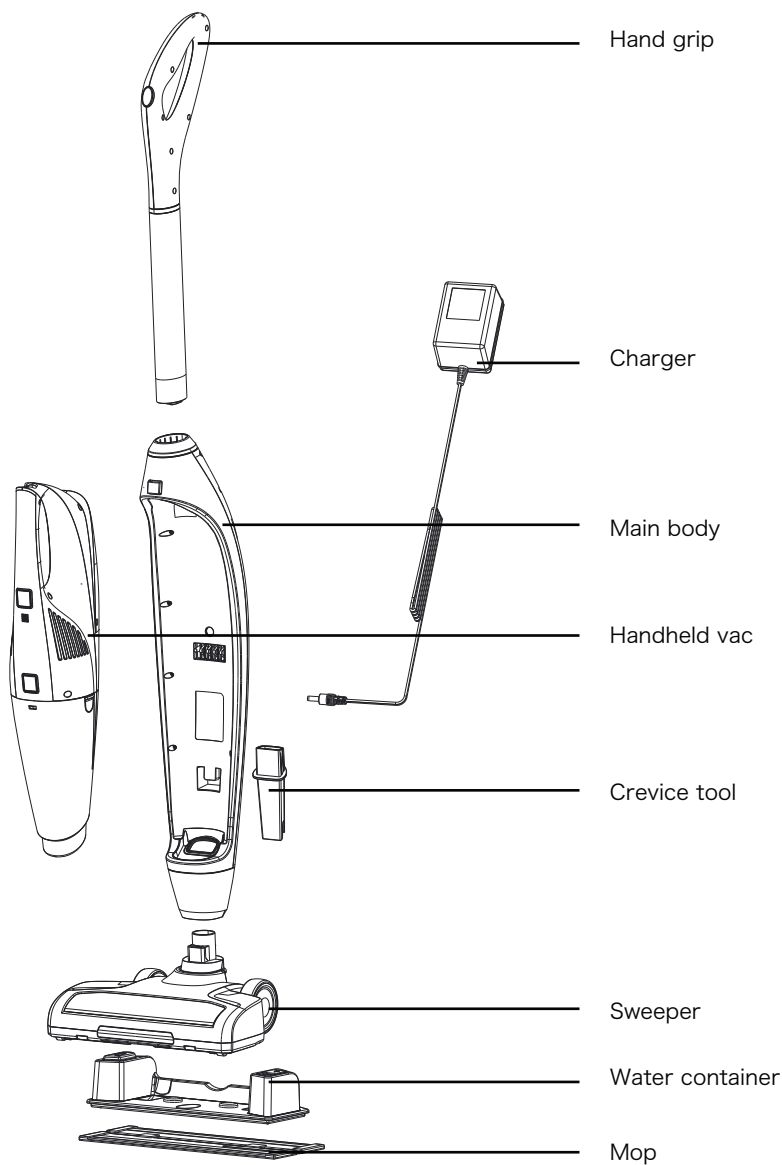


※ Before first time using

 - 1 Insert the hand grip into the body
- 2 insert the body into the sweeper
- 3 put the handheld vac into the body
- 4 insert the crevice tool into the body

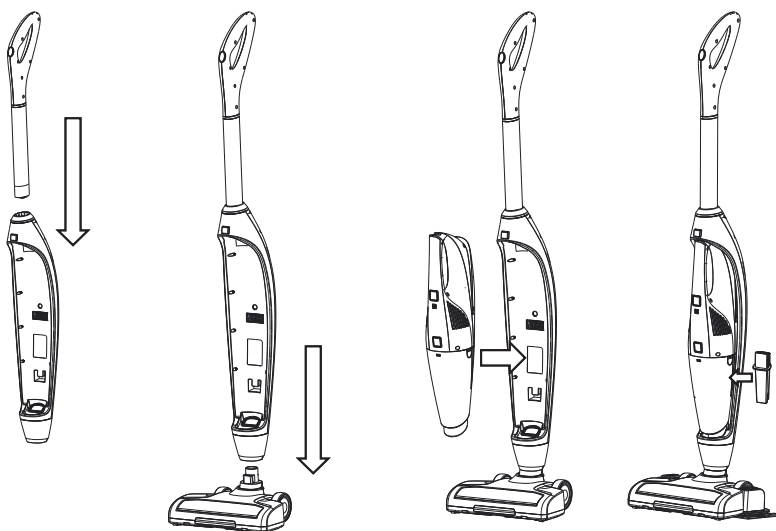

※ How to Charge

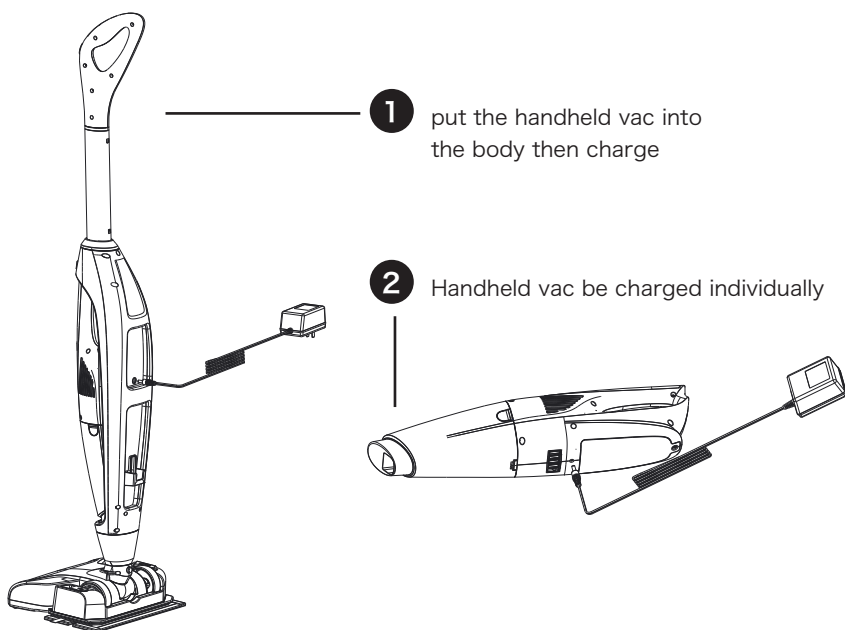 

When using if the the blue light blinks in 1 HZ frequency, it indicates battery power is low, it need to charge.

1. Press once on the switch on the hand grip to stop the machine.
2. Connect the plug of charger to the electric supply
3. Connect the another end of charger to the battery pack inside of the main body through DC hole
4. The blue light blinks in 1 HZ frequency, which indicates charging normally.
5. The blue light on, which indicates the battery is fully charged.
6. Unplug the charger and put aside
7. Handheld Vac can be charged when it is in the main body or get it out to charge

△Caution:

Do not put water into the charge hole of the main body, or the product will fail in function.

 
Do not charge or store the product below 0°C or above 40°C, otherwise it will affect the function

When charging, the charge temperature may rise, it is normal phenomenon

※ How to use? (For the handheld Vac)


1

Press this button, get the handheld vac out

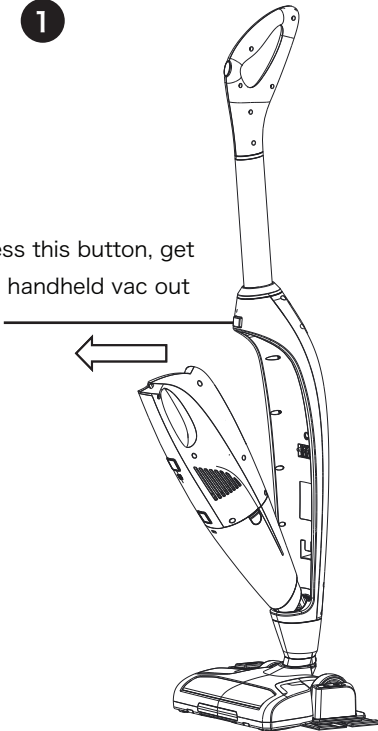


2

 
Turn on or Turn off

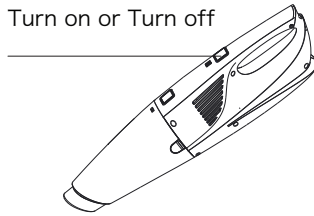

3

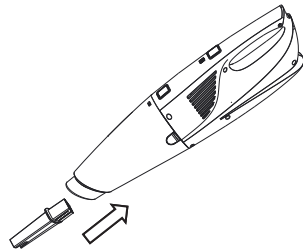 

4

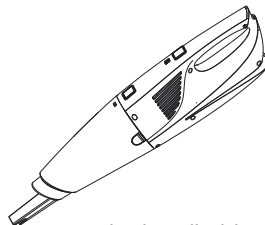 


the handheld vac works


※ How to use? (The main body+ Handheld Vac)

Press it once, the product turned on and sweeper light on.
Press it twice, the product turned on and LED light on,
the sweeper start to work.

 When handheld vac assembled in the main body, the
switch have no function

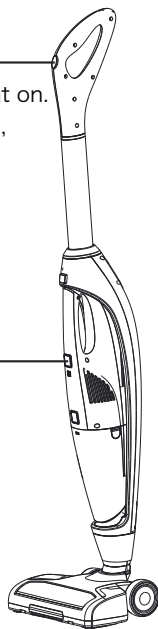


※ How to use? (The mop function)

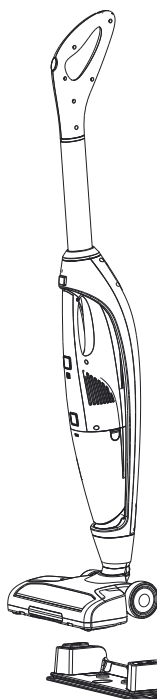 

Assemble the water
tank into the machine

 Step on this button,
water in the tank
can moisten the mop

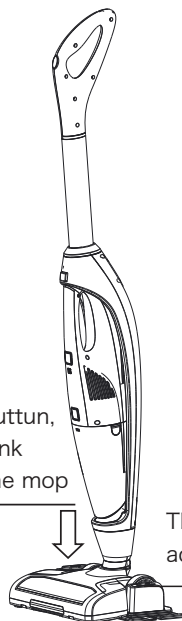


This hole is for
adding water

※ How to use? (Emptying the dirt container)


1

 press this button

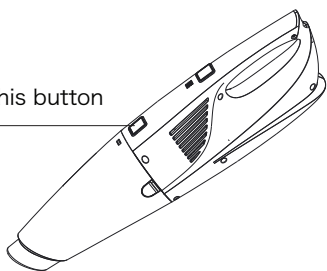


2

 get the dust container out

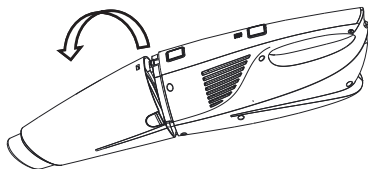


3

 get the filter out

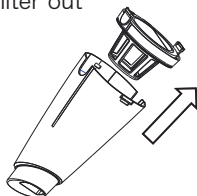

4

 
Emptying the dirt container

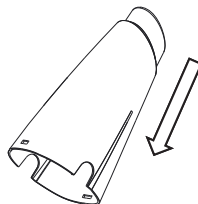

※ How to use? (Cleaning)


1

 get the filter and support out

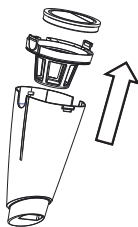


2

 clean the filter and the support
(washable)

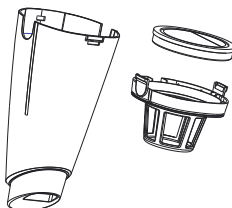


3

 Get the brush wheel out

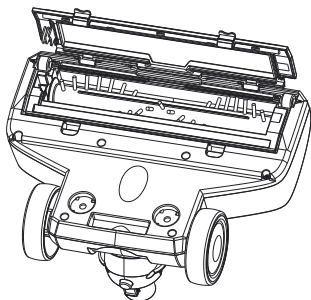

4



 
clean the brush wheel



if there are hairs in the brush wheel, disassemble the pole out, and use a knife to cut the fair through the groove and clean the pole

※ How to change the battery?

   - 1 Unscrew the screw on the bottom of the machine
- 2 get the cap out
- 3 get the battery out

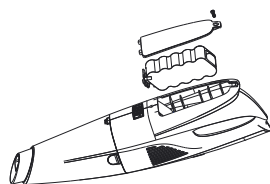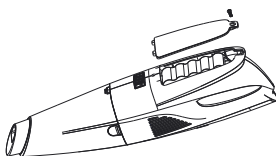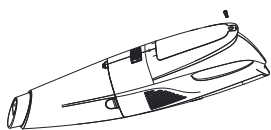

△Caution:

1. The machine is applied to use indoors only, please kindly read the instruction manual before using it.
 2. This machine is applied to clean flat hard floor and short hair carpet instead of using on uneven surfaces.
 3. Suitable to clean less than 10mm dust.
 4. For dry pick up only, Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids and vapor.
 5. When the handheld vac is out of the main product, do not turn on the machine, in case of inhaling dust ruined the fan.
 6. When the battery is low till no power, recharge it after 30min rest to protect the battery, extend the using life.
- ※ Make sure the product is turned off when maintenance and care of the product.
- ※ Do not soak the machine into water when cleaning.
- ※ Use clean and soft cloth with water or detergent to wipe the product.
- ※ Do not clean the product with gasoline, alcohol, rubber glue or other intense detergent.
7. Each time after using this product, get the wet mop out of the machine, clean and dry it for storage.
 8. Storage the clean product and spare parts in a cool dry place.
 9. If the product stock over 6 month no used. pls discharge then recharge again.
 10. Discharge and recharge thrice, can keep the motor and battery good condition.

Troubleshooting Guide

Please read this manual and check the following points carefully before bringing the appliance to customer service

Problem	Possible reason	Possible solution
working hours' getting shorter after usage	battery capacity deterioration	please contact dealer to replace the battery
indication light with 3Hz frequency last 30 seconds while working	battery power is inefficiency	recharge required
indication light flash with 5Hz frequency while recharging	recharging malfunction	Please contact dealer
Indication light with 5Hz frequency	main brushes is entangled	cleaning the main brush
Indication light with 5Hz frequency	Battery with high temperature protection	Stop work can keep it cool down

■Product specification

Power Supply: Rechargeable Battery
Input Voltage: AC100-240V 50/60Hz
Rated Output Voltage: 17.5VDC,650mA
Battery Capacity: Li-ion 14.4V 2000mAh
Charging Time: 3.5Hours
Continuously Working Time: About 20 minutes
Suction power: 2.4-3.0KPa
Dust capacity: 0.6L
Product size: 1135*265*190mm
Product weight: About 3400g

WARRANTY

Dear Customer,

Congratulations! We wish you a long and happy association with Amstrad. We would like you to know your privileges with respect to your Vacuum Cleaner

You are entitled to:

1. Repair or replacement of any parts other than plastic parts free of charge, for a period of 12 months from date of Invoice / Bill.
2. The defective part(s) shall be replaced with functionally working equivalent part(s). The removed part(s) will be OVOT PVT LTD's property.
3. These privileges are available to the original purchaser only.
4. In an event when the Vacuum Cleaner requires attention at the company's service center / authorized dealer, the purchaser should arrange to deliver the Vacuum Cleaner to the authorized service center at this cost under supervision of company's service engineer.
5. The privileges mentioned above, are for repair and replacement of defective parts only, and does not cover any consequential damages or loss or replacement of the Vacuum Cleaner itself or a refund.
6. If required, replacement of machine will be at the sole discretion of the company. Company reserves the right to replace with an equivalent model, if the same model is not available.

WARRANTY CARD

TERMS OF WARRANTY*	
Repair or replacement of any part other than the plastic parts free of charge for a period of 12 months from the date of invoice / bill	
Machine SL No.:	Dealer's Stamp & Signature
Model:	
Dealer's Name:	
.....	
Address:	
.....	
Date of Purchase:	

7. Conditions Apply as described in the manual.
8. Design and Specifications are subject to change for product improvement.

WARRANTY TERMS AND CONDITIONS

The warranty stands void in case of the following conditions:

- a. The Vacuum Cleaner has been damaged due to misuse, negligence, accident, improper installation and improper electrical circuit outside the machine, any defective electric supply, pests or any external agency. Company's decision will be final in this regard.
- b. The Vacuum Cleaner is damaged in transit whether carried by the company's transport or by the purchaser himself.
- c. The Vacuum Cleaner is tampered with, serviced or repaired by any agency not specifically authorized by the company.
- d. The Vacuum Cleaner is not used in accordance with the instructions given in the User Manual given along with this machine.
- e. The company shall not be liable for any dealer expenses, if any, in carrying out the terms of this warranty.
- f. The company shall not be liable for any delay in rectifying the Vacuum Cleaner, in the event of non-availability of parts or situations beyond the control of the company. The company will not be responsible for any losses direct or indirect in this regard.
- g. This warranty is not applicable if the Vacuum Cleaner is put to any commercial use or used at places like hospitals, institutions, community halls, hostels and other similar applications.
- h. The employees, dealers and service personnel of OVOT PVT LTD have no authority to change the terms of this warranty.
- i. This warranty issued is subject to the jurisdiction of the Civil Court of Pune.
- j. The company, OVOT PVT LTD assures warranty 12 months from the date of invoice / bill.



OVOT Private Limited

Office no 302, 3rd Floor, Business Avenue, 6th Lane, Koregaon Park, Pune 411001

Web.: www.amstradworld.com | Email : custcare@ovot.in, info@ovot.in,
feedback@ovot.in, ewaste@ovot.in | Customer Care no - 1800 26 77777

IVR No.: 020 7197 0079 | WhatsApp Service Support: +91 9175950079