
QUALITY · SERVICE · TECHNOLOGY
QST

THE ALL NEW NEXT GENERATION WASHING MACHINES

AMSTRAD

KHUSHIYON KI SHURUAT

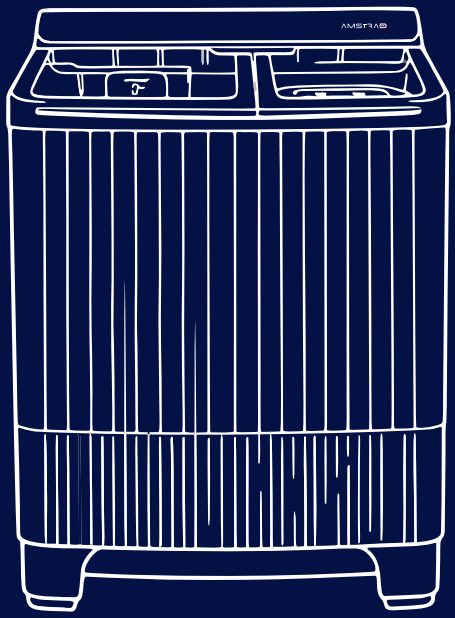

USER'S MANUAL

SEMI-AUTOMATIC WASHING MACHINE

MODEL NO.

AMWS80VR / AMWS90VR / AMWS95VRA

www.amstradworld.com

AMSTRAD
KHUSHIYON KI SHURUAT

Dear Customer

Congratulations on being the Proud owner of Amstrad Washing Machine. Your washing machine comes with a Amstrad Guarantee of Quality.

Amstrad takes great pride in providing its customers with perfect products that adheres to international quality standards.

Amstrad is committed to international quality standards

Amstrad is committed to provide the ultimate customer satisfaction as nothing brings us greater joy than having satisfied customers of Amstrad.

At Amstrad, feedback and suggestions based on your product usage experience are greatly appreciated.

⚠ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Don't put hands into the tub when it's working. Don't let children play with the washer.

The power cord of the washer is Y type. It must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Contents

	Page No.
1. Safety Precautions	2
2. Description Of Control Panel	3
3. Description Of Parts	4
4. How To Install	5
5. Auto Soak	5
6. Spin Shower Rinsing	5
7. How To Spin	5
8. How To Wash	6
9. Rinsing	7
10. Care & Maintenance	7
11. Trouble shooting	7
12. Specification Chart	8
13. Warranty	9
14. Warranty Terms and Conditions	10
15. Safety Information	11

Features

- **RUST FREE**

  This machine is made of Plastic body which is rust free. This gives your machine a longer life.

- **UNIQUE AUTO SOAK**

  A specially designed soak system for better soaking

  Soaking is an important element of the washing machine process. It enhances and optimizes the detergent's action on the clothes, with this washing machine you can forget about soaking the clothes manually. Just put your clothes in the machine, add water and detergent, the rest will be taken care by the Unique Auto Soak feature, The Unique Auto Soak option provides you the benefit of an ideal soak, which is better than the manual soak, it supplements soaking with intermittent agitation to ensure that all your clothes receive uniform soaking and better detergent action.

- **UNIQUE SPIN FOUNTAIN** (Spin shower Rinsing of cloth)

  When the washed clothes are transferred into the spin tub, there are chances of the detergent still remaining in the clothes. This washing machine has a special inlet in the spin tub through which water is showered onto your clothes. This ensures that any traces of detergent left on the clothes are removed before drying.

Product Disposal Guidelines:



For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized collection center, registered dismantler or recycler,or company service center when disposing of this product.
Please see the company website for further information on collection centre, etc.


उत्पाद निराकरण दिशानिर्देश :



संसाधनों का प्रभावी उपयोग सुगम बनाने हेतु पुन: चक्रण के प्रयोजन से इस उत्पाद को कृपया निकटवर्ती अधिकृत संग्रहण केंद्र, पंजीकृत भंजक या रिसाइकिलर (पुन: चक्रणकर्त्ता) या अधिकृत सर्विस सेन्टर सेवा केंद्र को वापस करें ।
संग्रहण केंद्रों इत्यादि के बारे में अधिक जानकारी के लिए कृपया **कंपनी** की वेबसाइट देखें।

WARNING


- There is a danger of injury.
- Do not touch the tub until it completely stops.
- Keep children away while in use.
  There is a danger of electric shock, electric leakage and fire.
- Do not install this product in a humid location such as a bathroom or a location to water (rain etc)
- Do not place flammable substances near the machine such as kerosene, benzine, paint thinner and alcohol.
- Never disassemble, repair or remodel this washing machine.

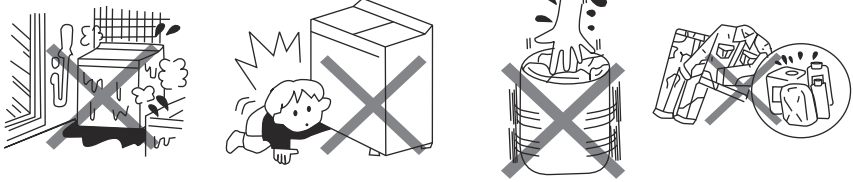


CAUTION

- There is a danger of injury.
- Do not wash and spin waterproof sheet and garment. The item could be damaged or cause high vibration during spin cycle.
  Example : raincoat, cloth for fishing or skiing downjackets, impermeable sheets, etc.
  It may cause damage to clothes or the washing machine.
- Do not connect to the hot water supply.
- Do not put clothes with such substances in the tub like keys, pins, coins. Kindly ensure that all metallic buckles / zippers / hooks must be turned inside.
- Do not use washing machine to wash items other than clothes, blankets, curtains, towels etc.
- Do not use water hotter than 50^{0}C for washing.
- The instructions for appliances connected to the water mains by detachable hose-sets shall state that the new hose-sets supplied with the appliance are to be used and that old hose-sets should not be re-used.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use machine when power cord is torn or damage, Removing the power plug from the power outlet, you should remove it by pulling its insulated body not its cord. And do not place the machine or any heavy objects on the power cord, it may cause the damage to the power cord. If the power plug or power cord is damaged, contact your nearest SERVICE CENTER.

Safety Instruction

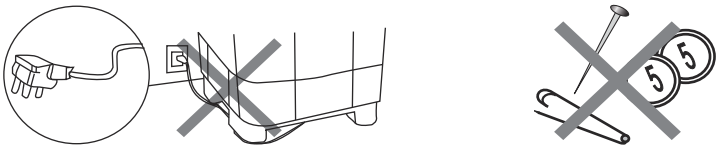

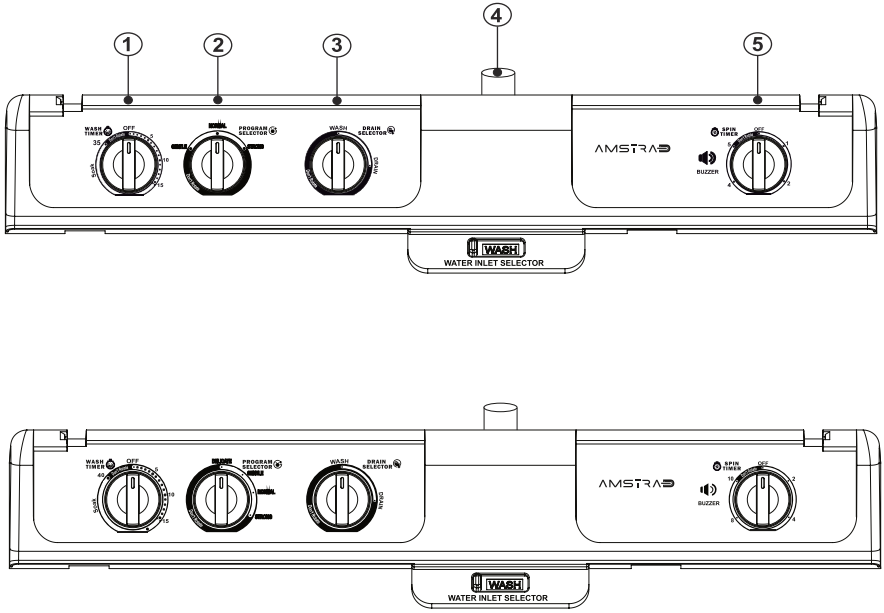

1. Wash Timer : This timer is used for Auto SOAK, WASH and RINSE operations. Following combination can be selected.

A) Auto Soak + Wash:- Select the desire soak time by setting the Timer between 15~35 min./15-40 min. (According to model)

B) Wash/Rinse :- You can select Wash/Rinse time up to 15min. If you want Wash/Rinse time for shorter duration set the knob between 1-15min.


2. Wash Program Selector Set the knob to desired program available as per model (GENTLE/NORMAL/STRONG/DELICATE) according to kinds and quality of the laundry.

3. Drain Selector : This selector is to set for "WASH/RINSE" or "DRAIN" the water from wash tub.
- (WASH/RINSE) for washing & Rinse
- DRAIN for draining the water from the wash tub.

4. Water Inlet : This is used to direct water supply to wash tub for washing or spin tub for spin shower.

5. Spin Timer :This timer is used to select your desired length of time to spin laundry by using 5 or 10 minutes timer. (For Shorter Duration of spin set the knob between 1-5min or 1-10min.)


Note : 1) Do not rotate the knobs more than prescribed limits.
2) Above graphics is just representation, it may not match with your washing machine.
3) Do not put machine directly in the sun light.

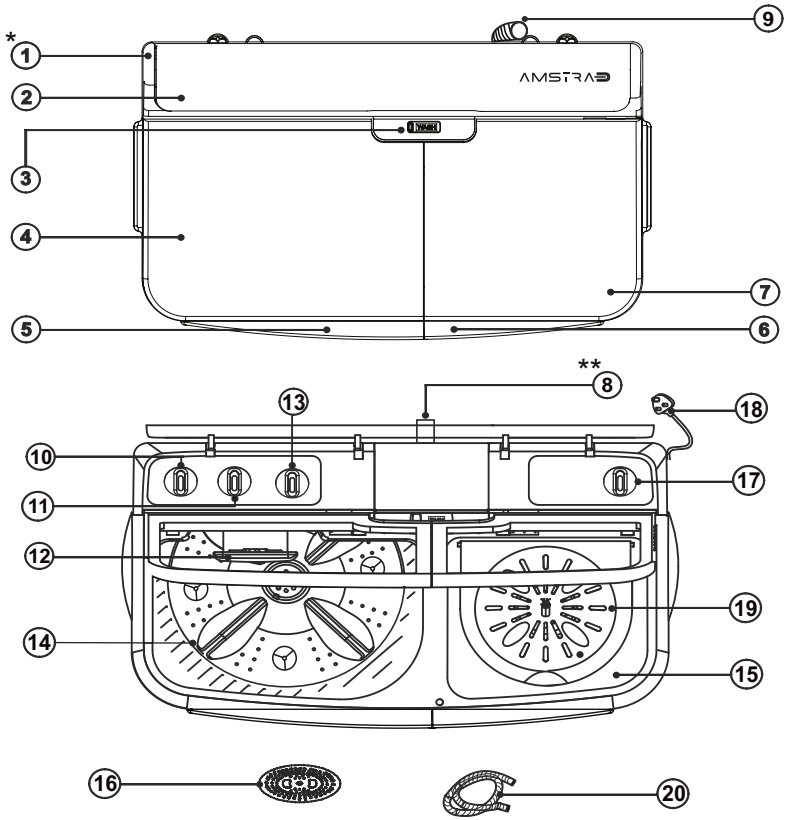

1.Control panel
2. Panel Cover
3. Water Selector
4. Wash Lid
5. Wash Deco
6. Spin Deco
7. Spin Lid
8. Water Inlet
9. Drain Hose
10. Wash Timer
11. Program Selector
12. Detergent Box
13. Drain Selector
14. Pulsator
15. Control Table
16. Mid Cover
17. Spin Timer
18. Power Cord
19. Safety Cover
20. Water Inlet Pipe

(Do not match the figure with your machine as it may differ from your model. These are schematic diagrams only.)


How To Install

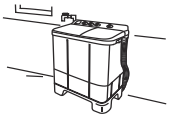

1) Install the Washing machine in a well-ventilated, safe place. Machine should be put on flat ground and where you can connect the power supply. It is recommended to place the washing machine on a leveled floor and avoid a place where the washing machine can be exposed to direct sunlight.
2) Place the washing machine on plain surface.
   Maximum permissible inclination is two degree.
3) Place the washing machine more than 5 cm away from the wall.
4) If machine is installed on Carpet, be sure that Carpet does not block any openings.
5) Insert the Power Plug firmly into the main power supply.



6) For Drain hose, kindly take out given drain hose from user manual bag and assemble the drain hose into the given four way pipe (back side of machine) for assembly kindly use Drain hose spring for locking. During assembly you may get some amount of water in four way pipe. It was used for machine performance test. It does not imply any malfunction.



Cord Replacement :

If the Power Cord is damaged, it must only be replaced by a authorised service personal or at authorised dealer, because special purpose tools are required.



Preparation For Washing

1) The machine should be put on Flat Ground.
2) Ensure Three Core Power Plug seat must have Ground Connection.
3) Lay down the Drain Hose.
4) Connect the water Inlet Hose to Water Tap.
5) Remove objects like coins, pins etc., from clothes before washing. They may damage your clothes and clog the drain system.
6) According to the weight of cloth, adjust the level of water.
7) Switch ON power.

Auto Soak

SOAK function enhances the efficiency of the regular function, which helps to wash the clothes cleaner. Soak function will be operated after the WASH TIMER switch is set to 35/40 min. position, then the machine will operate with soak function. Soak function will run and stop alternately until the 15th minute then the operation will reserve to regular function.

Spin Shower Rinsing

With spin shower, the remaining detergent in the clothes will be removed and you can save on additional rinsing time and water. (However, if water from the tap contains rust and / or dirt, do not perform spin shower.)

1. Direct water to spin tub by putting Inlet pipe to water inlet.
2. While Spin Timer is at "0" (zero) position (spin tub not rotating), turn the Knob for about 1 minute.
3. Turn off the tap and then spin for about 1-5 or 1-10 minutes.

How To Spin

1. Put the laundry into the spinner tub by putting the small-sized laundry in the bottom area to keep the balance of the tub. (figure 1)
2. Place the safety cover in the tub & close firmly the inner and outer lids of the spinner tub. (figure 2)

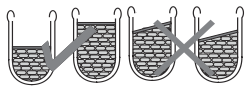


Fig. 1

3. Select the spin time to 1-5 or 1-10 min (As Per Model).
4. If any abnormal noise detected from spin tub then open spin lid & adjust the clothes.

Spinning Time For Laundry

1. Cotton clothes : 5 min,10 min.
2. Delicate clothes (Thin synthetic fiber, sarees etc.): 2 min.
3. Sweater (Synthetic fiber): 2 ~ 3 min.
4. Underwear (Knitting clothes): 3 ~ 5 min.

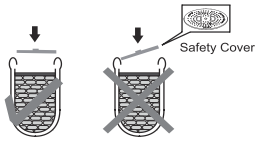



Fig. 2

Note :

1.If there is a sound from the Spinner, open the Spin Lid then try to lay the laundry evenly.
2.If the lid is open while the spinning function is working, the machine will stop within 5-10 seconds. If it is still running, contact SERVICE CENTER.
3.If the Spin Lid is not closed, the machine will not work even the timing is set.

In case of the laundry falling from the spinner tub

1. Remove the Power Plug from main power supply.
2. Open the mid cover.
3. Pick up the laundry carefully.
4. If the laundry can not be removed call service engineer.
5. Use machine only after removing the laundry.

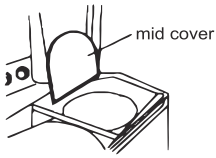


Final Step

Remove the clothes from the Spin Tub then turn the Drain Selector Knob to Drain to discharge the washing water and then turn the Drain Selector Knob to Wash when water completely drain out. Then remove the Power Plug from main power supply and hang the Drain Hose to washing machine. When the washing machine gets dirty, wipe it with the slightly wet cloth.

How To Wash

1. Set the Drain knob to "WASH SETTING."
2. Fill the tub with water by changing the lever position of water level selector according to load (Refer table 1)
3. Put the clothes in the tub. Do not put an excessive amount of laundry, in the tub. (Refer table 1)
4. Put recommendable quantity of detergent in detergent box.
5. Set the Wash Selector to GENTLE / NORMAL/ STRONG /DELICATE (As Per Model).
6. Set Wash Time up to 15 min, depending on your cloth load & type (Refer table 1)
7. When washing is completed, drain off the washing water by adjusting the knob to "DRAIN" position.
8. After the washing water is discharged, turn the knob switch to "WASH".
9. Fill the water up to desired level for rinsing.

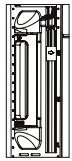

Note : Water level may be less than the water level line while washing. If so, refill the water. Be careful not to exceed the indicated water level line; it may cause water to spill out of the tub.

Note : 1. Actual quantities of load may vary depending on the material size of laundry items.
2. If movement of cloth is too slow, remove some of the cloth until a steady movement is observed.

Table 1: Laundry Guide

Amount of Laundry	System \ Clothes	Synthetic Fiber	Cotton	Heavy Stained Clothes
Less than 1.2 kg	Washing Time	3-5 minutes	5-7 minutes	7-12 minutes
	Wash Selector	DELICATE / GENTLE	NORMAL / STRONG	STRONG
1.2 ~ 2.5 kg	Washing Time	5-7 minutes	7-10 minutes	10-15 minutes
	Wash Selector	DELICATE / GENTLE	NORMAL / STRONG	STRONG
2.5 ~ 3.8 kg	Washing Time	7-10 minutes	10-15 minutes	Wash 15 minutes
	Wash Selector	DELICATE / GENTLE	NORMAL / STRONG	STRONG
3.8 kg and above	Washing Time	Wash 10-15 minutes	Wash 15 minutes	Wash 15 minutes
	Wash Selector	DELICATE / GENTLE	NORMAL / STRONG	STRONG

Note : 1. Actual quantities of load may vary depending on the material size of laundry items.
2. If movement of cloth is too slow, remove some of the cloth until a steady movement is observed.

Rinsing

1. Fill the water up to desired level depending on cloth load.
2. Set the Wash Timer to 5 ~ 10 min. position to Rinse.
3. When you finish rinsing, drain off the water from the Wash Tub by turning the Drain Selector Knob to "Drain" position.
4. Transfer clothes to the Spin Tub for spinning.

Care & Maintenance

Be sure to remove the Power Plug from main power supply before cleaning the machine and the Filter.

Cleaning the Wash Tub

1. After washing is complete, fill fresh water above the level of pulsator without adding clothes.
2. Run the machine for 2-3 minutes turn the knob to "DRAIN" position.
3. When water Is completely drain out, turn the knob to "WASH". position.
4. Finally turn off the machine.


Trouble shooting

If any abnormality is found, check the following before calling for SERVICE CENTER.
1. Is the Power plug inserted firmly or Power Plug disconnected ?
2. Is the Wash / Spin Timer switch turned to "Off" position ?
3. Is the Spin Lid closed properly ?
4. is there any laundry fallen out from the Spin Tub ?


If all the above points have been checked and no abnormality is found but the machine still works improperly, please contact the nearest SERVICE CENTER or Call Customer Care No. provided on back page.

Magic/Net Filter Cleaning*

1. Push the upper part of the Magic Filter and pull (Fig. 1)
2. Open the cover and clean the magic Filter (Fig. 2, 3)
3. Close the cover and insert the lower part of the Magic Filter and push in. (Fig.4)

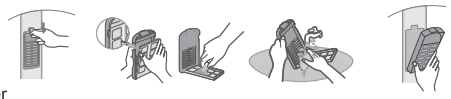

1. Pull out the Filter from the lock, use fingers to press & pull out at the part fingers to press & pull out at the part of the Filters side. (see fig. 1)
2. Turn the net inside out and clean with water. (see fig. 2)
3. Set back to the original position, insert the bottom first as shown press down and lock as the arrow. (see fig. 3)

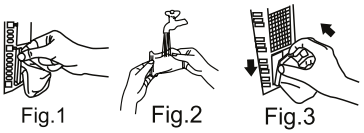


Note: It is recommended to clean the Magic Filter regularly.

Model	Rated Capacity (Wash)	Power Supply	Input Power Wash (Watt)	Input Power Spin (Watt)	Net Dimensions (mm)	Gross Dimensions (mm)	Net Weight (±1 Kg.)	Gross Weight (±1 Kg.)	Water Capacity Over Flow (±3 Ltr.)	Wash Time
AMWS80VR	8.0 kg	230V AC, 50Hz	400	160	815X485X1000	840X540X1050	24.5 kg	29.5 kg	80	35 Min
AMWS90VR	9.0 kg	230V AC, 50Hz	420	180	815X485X1075	840X540X1160	25.2 kg	31.0 kg	90	40 Min
AMWS95VRA	9.5 kg	230V AC, 50Hz	430	200	815X485X1075	840X540X1160	25.2 kg	31.0 kg	92	40 Min


Note : 1) **In View of Company Policy of continous development, these features, specification and colors are subjected to change without notice.

Wiring Diagram

35 min Timer (8.0 kg)

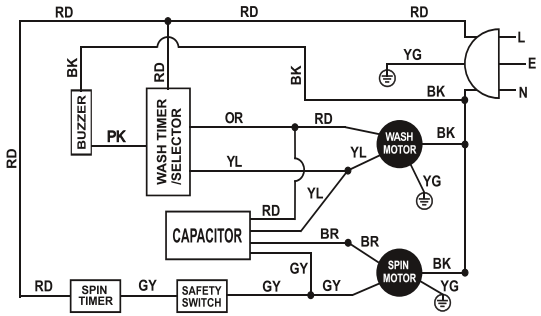

40 min Timer (9.0 kg, 9.5 kg)

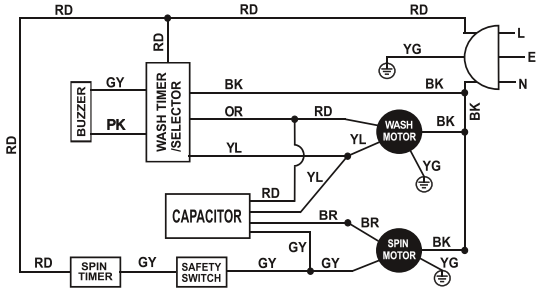

WARRANTY

Dear Customer,

M/s. AMSTRAD CONSUMER INDIA PVT. LTD
(Herein after referred as Amstrad or Company) warrants AMSTRAD Brand of Washing Machine in India to the original purchaser to be free from defects in materials and workmanship within **twenty four months** (**24 months**) from the date of purchase as provided in the warranty registration card or **thirty months (30 months)** from the date of manufacturing, whichever is earlier.

Congratulations! We wish you a long and happy association with **Amstrad**. We would like you to know your privileges with respect to your washing machine.

You are entitled to:
1. Repair or replacement of any parts other than rubber and plastic parts free of charge, for a period of 24 months from the date of Invoice/bill.
2. The defective part(s) shall be replaced with functionally working equivalent part(s). The removed part(s) will be **AMSTRAD**'s property
3. These privileges are available to the original purchaser only.
4. In an event were washing machine requires attention at company's service center / authorized dealer, the purchaser should arrange to deliver the washing machine to the service center at his cost under supervision of company's service engineer.
5. Company reserves right to change/extend the warranty on the motor, subject to the customer registering the product purchase details either on the company toll free no's, or on the company website (mentioned on the back cover).

WARRANTY CARD

TERMS OF WARRANTY*

Repair or replacement of any part other than the plastic parts and rubber parts is free of charge for a **period of 24 months** from the date of invoice/bill.

Machine Sl. No.: …….. Model: …….. Dealer's Name: …….. …….. Address: …….. …… Date of Purchase: ……..	Dealer's Stamp & Signature

- CONDITIONS APPLY AS DESCRIBED IN THE MANUAL
- DESIGN AND SPECIFICATIONS SUBJECT TO CHANGE FOR PRODUCT IMPROVEMENT.

WARRANTY TERMS AND CONDITIONS

Kindly note:

1. The privileges mentioned above, are for repair and replacement of defective parts only, and do not cover any consequential damages or loss or replacement of the washing machine itself or a refund.

2. If required, replacement of machine will be at the sole discretion of the company. Company reserves the right to replace with an equivalent model, if the same model is not available.

3. The warranty stands void in case of the following conditions:

a. The washing machine has been damaged due to misuse, negligence, accident, improper installation, and improper electrical circuit outside the machine, any defective electric supply, pests or any external agency.

b. The washing machine has been damaged due to use of sea water and/or substandard detergent.

c. The washing machine is damaged in transit whether carried by the company's transport or by the purchaser himself.

d. The washing machine is tampered with, serviced or repaired by any agency not specifically authorized by the company.

e. The washing machine is not used in accordance with the instructions given in the User Manual given along with this machine.

f. The serial number of the washing machine is deleted, defaced or altered.

g. The washing machine is purchased from any agency/dealer not authorized by **AMSTRAD CONSUMER INDIA PVT. LTD.**

h. Accessories other than those supplied with this washing machine are used.

4. The company shall not be liable for any dealer expenses, if any, in carrying out the terms of this warranty.

5. The company shall not be liable for any delay in rectifying the washing machine, in the event of non-availability of parts or situations beyond the control of the company. The company will not be responsible for any losses direct or indirect in this regard.

6. This warranty is not applicable if the machine is put to any commercial use or used at places like hospitals, institutions, community halls, hostels and other similar applications.

7. **AMSTRAD CONSUMER INDIA PVT. LTD.** employees, dealers and service personnel have no authority to change the terms of this warranty.

8. This warranty issued is subject to the jurisdiction of the civil court of Pune.

Safety Information

E-WASTE DISPOSAL

Environmental compliances:
As per the rules laid down by the Government for environmental concern & safety, your product has been made to comply and conform to the respective regulation as listed below. This product falls under the E-WASTE (MANAGEMENT) RULES, 2016 of Ministry of Environment, Forests & Climate Change.


RoHS declaration:
This Product is in conformity with the requirements of Rule 16 of the E-WASTE (MANAGEMENT) RULES, 2016. The content of hazardous substances with the exemption of the applications listed in SCHEDULE II of the E-waste (Management) Rules, 2016 is as follows:

1. Lead (Pb): not over 0.1% by weight;
2. Mercury (Hg): not over 0.1% by weight;
3. Cadmium (Cd): not over 0.01% by weight;
4. Hexavalent Chromium: (Cr6+): not over 0.1% by weight;
5. Polybrominated Biphenyls (PBBs): not over 0.1% by weight;
6. Polybrominated Diphenyl Ethers (PBDEs): not over 0.1% by weight.

Information under E-Waste (Management) Rules, 2016
For disposal of E-waste, please call our helpline no. or visit our website.

Do's and Don'ts for disposal of product:
1) Do's :
a. Always drop your used electrical/electronic products, batteries, cables, adapters and packaging materials after the end of their life at the nearest authorized collection point/center.
b. Separate the packaging material according to their respective waste disposal options and sorting for recycling.
c. The batteries can be easily removed from the product for recycling.

2) Don'ts :
a. Never dump E-waste in Garbage bins or Municipal solid waste stream.
b. Do not dispose your product as unsorted municipal waste.
c. Do not throw or dispose used, damaged and leaking batteries & products into house hold waste.
For more information on safe disposal and recycling, please call on Toll free no.- **1800 267 4777** or visit our Website **https://amstradworld.com/ewaste**

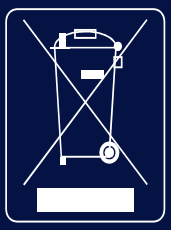

For the purpose of recycling to facilitate effective utilization of resources please return this product to a nearby authorized collection centre.
Customer can reach or call **Toll Free No. 1800 267 4777** for deposit of Hazardous E-Waste material of Amstrad and any other brand.
For details please visit web.:
https://amstradworld.com/ewaste

RoHS COMPLIANT

AMSTRAD
KHUSHIYON KI SHURUAT

SCAN QR CODE
TO RAISE A SERVICE REQUEST

Amstrad Consumer India Private Limited
Office : Gat No- 730, Milkat No 1660, Near Bolhai Mata Palace, Taluka Haveli, Wade Bholhai, Pune - 412207

For Customer Complaints, Contact Executive Customer Care :
Amstrad Consumer India Private Limited
Office : Gat No- 730, Milkat No 1660, Near Bolhai Mata Palace, Taluka Haveli, Wade Bholhai, Pune - 412207

Web : www.amstradworld.com I E-mail : care@amstradworld.com,
Customer Care No. : **1860 266 77777** | IVR No. : **020-71970079**,
WhatsApp Service Support : **+91 9175950079** | WebApp: app.amstradworld.com
E-Waste Email : ewaste@amstradworld.com I E-Waste Toll Free No. : **1800 267 4777**